



Plastic Forests

Recycling Plastic Films



GreenMongrel


MiniWheel Stop™

www.plasticforests.com.au


INSTALLATION INSTRUCTIONS

Install when temperature is 10-35°C to achieve required adhesion.

1. Place the car in the desired position in the garage.
2. Place the Mini Wheel Stop in front of the front tyre/s as shown, with the red arrow on the end of Mini Wheel Stop pointing towards the tyre.

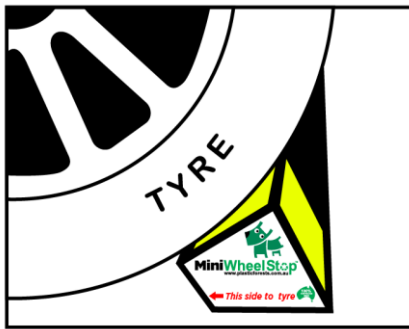

3. Mark the position of the Mini Wheel Stop on the garage floor with a pencil or masking tape.
4. Move the car away from the Mini Wheel Stop position.
5. Thoroughly clean the desired floor area to remove dirt, oil, grease etc with a product like window cleaner.
Allow the area to dry completely.
6. When dry, peel off the Instruction label and the adhesive backing strip.
7. Apply the Mini Wheel Stop in the desired position on the garage floor, with the red arrow pointing towards the tyre. Press firmly for 60 seconds.
8. Allow the Mini Wheel Stop to bond to the floor for at least 24 hours (72 hours for maximum bond) before using.

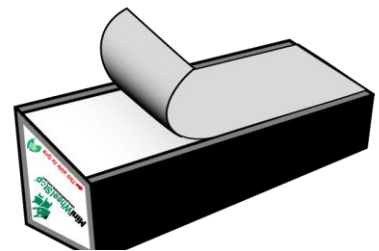


100% recycled from Australian plastic waste & recyclable



Made from 155 plastic bags (at 5g/bag)



Australian made and owned

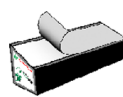

Easy 'peel & stick' installation



No tools required



High visibility reflective tape



Ph: (02) 6048 0532
Factory: 21 Union Road
North Albury NSW 2640
www.plasticforests.com.au
ACN: 147 913 559
ABN: 99 147 913 559
4/13/2019 1:19 PM